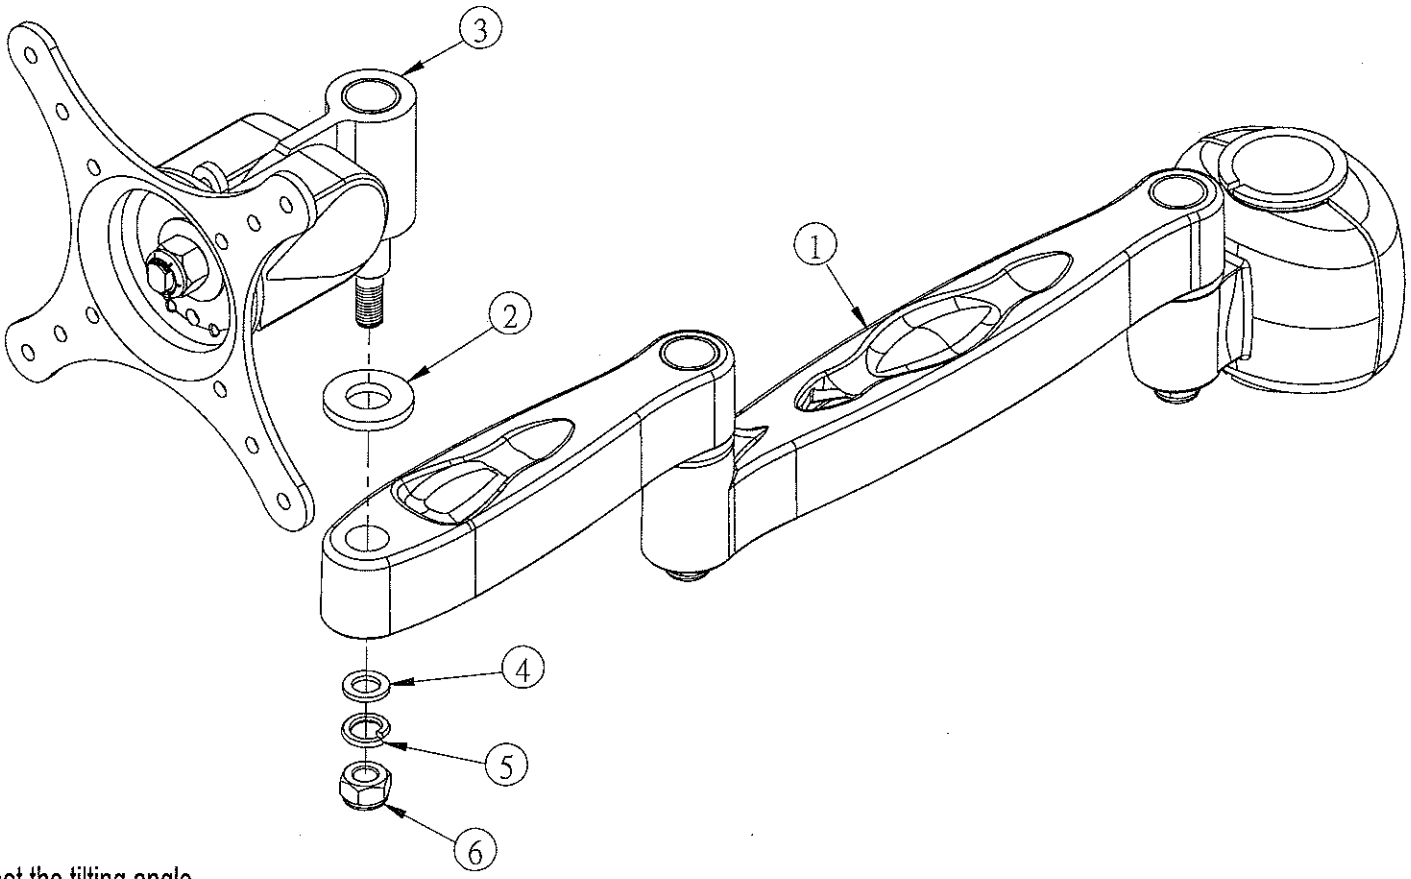

Why my monitors keep flopping?

Answer: Please follow steps below to set the tilting angle

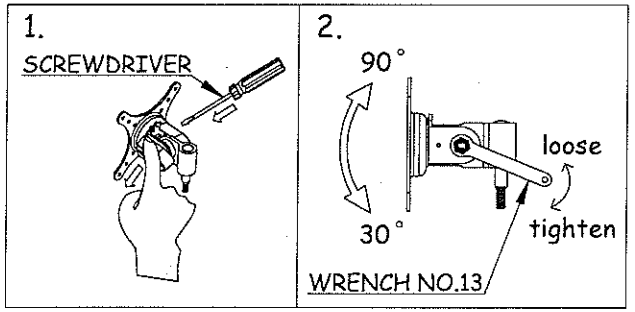

1. Locate the two caps which are on each side of the axis of the monitor bracket.
2. Use a flat-blade screwdriver to push open the caps.
3. Loosen the nut adjust the tilting angle then tighten the nutadain.

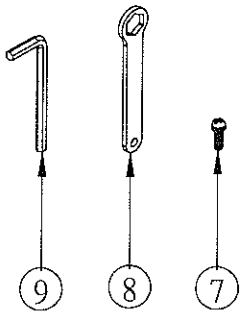

*** LCD-0040 ***

Item	Spare parts	Q'ty
1	FOLD ARMS	1
2	WASHER ∅12.5*∅25*T=3	1
3	LCD MOUNT ASSEMBLY	1
4	WASHER ∅8*∅13	1
5	SPRING WASHER ∅5/16"	1
6	NYLON NUT 5/16"-18UNC	1
7	SCREW M4*P0.7*L12mm FOR LCD	4
8	WRENCH NO.13	1
9	ALLEN WRENCH NO.4	1